


Installation Instructions

Top-Entry Tool-less Keystone Jack




1

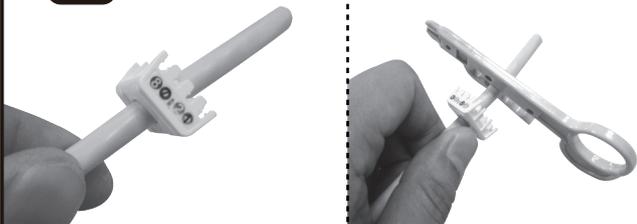


- Reeve the cable through the wire cap.
- Then strip the cable jacket about 30mm.

2

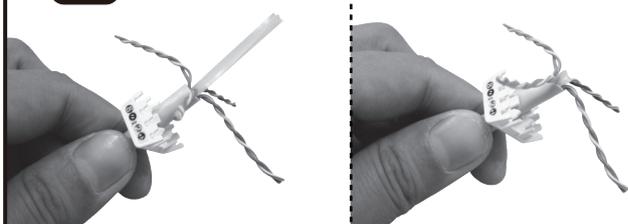


- Spread each pair and cut off the filler (if any).

3

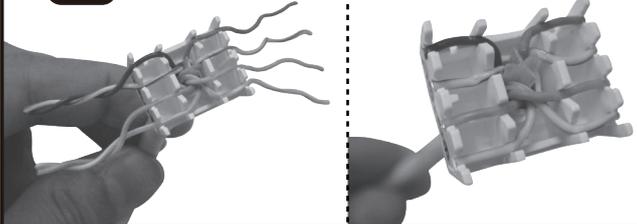


- Pre-load each pair to the designated wiring scheme.
- Trim flush excess wires.

4

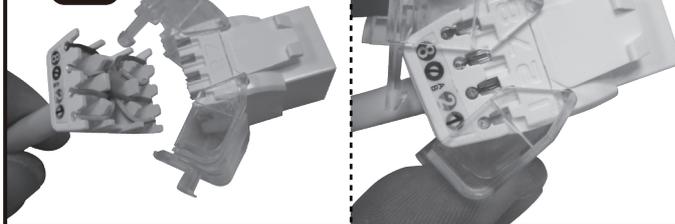


- Load the wired cap to the keystone jack.
- Evenly press the wings towards to each other.

5

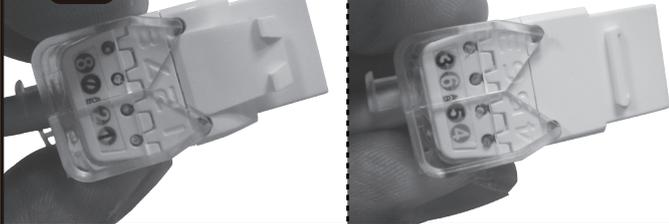

- The termination is finished once the wings are firmly locked in place.
- Check the termination condition of each conductor by visual inspection.

6

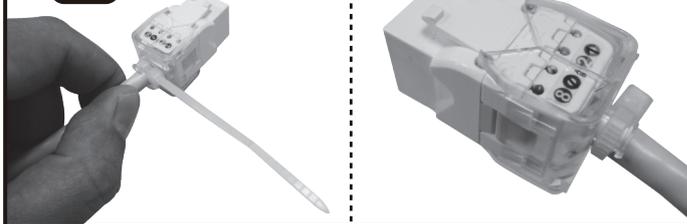

- Wrap the cable tie around the holder neck to enhance the strain relief of cable back feeding force.
- Cut of the excess - DONE!

NOTE

1. Only suitable for cable O.D. smaller than 6.00mm. Insulated conductors have to be smaller than 1.00mm as well.
2. Excess wires need to be sharply trim flush along each side of the cap. Failure to do so might result in improper termination.
3. If any conductors bigger than 0.6mm(23AWG) have been terminated, reversal of smaller conductors is no longer possible.
4. In order to facilitate fingers termination(tool-less), the tensile of contacts have to be adjusted. As a result, only durability less than 30 times termination can be guaranteed, please note.