# **Owner's Manual**

# DVI/USB + Audio Secure KVM Switch

Models: B002-DUA2, B002-DUA4

### **Table of Contents**

Package Contents	2
Optional Accessories	2
System Requirements	2
Features	3
Safety Instructions	4
Stacking	5
Grounding	5
Installation	6
Warranty & Product Registration	7

### **PROTECT YOUR INVESTMENT!**

Register your product for quicker service and ultimate peace of mind.

You could also win an ISOBAR6ULTRA surge protector— a \$100 value!





www.tripplite.com/warranty





1111 W. 35th Street, Chicago, IL 60609 USA • www.tripplite.com/support

Copyright © 2017 Tripp Lite. All rights reserved.

17-10-008-933135-EN.indd 1 10/13/2017 2:35:38 PM

## **Package Contents**

- B002-DUA2 (2-Port) or B002-DUA4 (4-Port) Secure KVM Switch
- C13 to 5-15P Power Cord
- (4) Foot Pads
- · Owner's Manual

## **Optional Accessories**

- P312-Series 3.5 mm Stereo Audio Cables
- P556-006 DVI-A Male to HD15 Male Adapter Cable 6 ft.
- P560-Series DVI-D Dual-Link Cables
- P560-xxx-A Series DVI-D Dual-Link + Audio Cables
- P561-Series DVI-D Single-Link Cables
- P759-Series DVI-D/USB/Audio Cable Kit for Secure KVM Switches
- U022-Series USB 2.0 A/B Device Cables

# **System Requirements**

- DVI or VGA\* monitor
- · USB mouse and keyboard
- Computer with a DVI or VGA\* port
- Computer with a USB port
- Microphone with a 3.5 mm Male connector (if using the microphone feature)
- Speakers with a 3.5 mm Male connector (if using the speaker feature)
- · A P759-Series cable kit is required for each connected computer
- Compatible with all major operating systems

2

<sup>\*</sup>Requires a DVI to VGA adapter

### **Features**

- National Information Assurance Partnership (NIAP) certified to EAL 2+.
- Safely switch between computers (up to four) with varying security levels.
- **Isolated Channels** Each port is its own channel, prohibiting data to be transferred between connected computers.
- **Tamper-Warning Labels** Tamper-warning labels are located on each side of the KVM, providing visual evidence if the unit has been tampered with or compromised. Removing these labels will void the warranty.
- Housing Intrusion Protection Technology Housing Intrusion Protection technology disables the KVM if the housing is opened, causing it to become inoperable. When disabled, the front panel LEDs will flash repeatedly. Opening the housing will disable the unit and void the warranty.
- **Tamper-Proof Components** All internal circuitry is soldered directly to the board to prevent components from being tampered with.
- **Fixed Firmware** Firmware is non-reprogrammable as a security measure against attempts to alter the logic of the KVM.
- Automatic Keyboard Buffer Clearing The keyboard buffer is automatically cleared after data transmission so no information is left stored in the switch.
- No Memory Buffer The only way to access connected computers is via push button. Port switching methods such as On-Screen Display (OSD) and Hotkey Commands have been excluded to further ensure data integrity.
- · Compatible with all major operating systems.
- DVI-I Dual-Link signal supports digital video resolutions up to 2560 x 1600 and analog video resolutions up to 2048 x 1536.
- Supports transfer of EDID information for optimal display performance.
- Supports audio for both speaker and microphone.

### **Important Safety Instructions**

- Read all of these instructions. Save them for future reference.
- · Follow all warnings and instructions marked on the device.
- Do not place the device on any unstable surface (cart, stand, table, etc.). If the
  device falls, serious damage will result.
- · Do not use the device near water.
- Do not place the device near, or over, radiators or heat registers. The device cabinet contains slots and openings to allow for adequate ventilation. To ensure reliable operation and to protect against overheating, these openings must never be blocked or covered.
- The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built-in enclosure unless adequate ventilation has been provided.
- · Never spill liquid of any kind on the device.
- Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- The device should be operated from the power source type as indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power utility.
- Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.
- If an extension cord is used with this device, make sure that the total ampere rating
  of all products used on this cord does not exceed the extension cord ampere rating.
  Make sure that the total rating of all products plugged into the wall outlet does not
  exceed 15 amperes.
- Position system cables and power cables carefully. Make sure nothing rests on any cables.
- To help protect your system from sudden transient increases and decreases in electrical power, it is recommended that you plug your devices into a Tripp Lite Surge Protector, Line Conditioner, or Uninterruptible Power Supply (UPS).
- When connecting or disconnecting power to hot-pluggable power supplies, observe the following guidelines:
  - > Install the power supply before connecting the power cable to the power supply.
  - > Unplug the power cable before removing the power supply.
  - > If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supplies.
- Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts, resulting in a risk of fire or electrical shock.
- If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
  - > The power cord or plug has become damaged or frayed.
  - > Liquid has been spilled into the device.
  - > The device has been exposed to rain or water.
  - > The device has been dropped or the cabinet has been damaged.
  - > The device exhibits a distinct change in performance, indicating a need for service.
  - > The device does not operate normally when the operating instructions are followed.

4

# Important Safety Instructions continued

- Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.
- This device is designed for IT power distribution systems with up to 230V phase-tophase voltage.
- To prevent damage to your installation, it is important that all devices are properly grounded.
- This device is equipped with a three-wire grounding-type plug. This is a safety
  feature. If you are unable to insert the plug into the outlet, contact an electrician
  to replace your outlet with one that will accept this type of plug. Do not attempt
  to defeat the purpose of the grounding-type plug. Always follow your local/national
  wiring codes.
- Warning! There is a risk of explosion if the battery is replaced with an incorrect battery type. Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.

### **Stacking**

The KVM switch can be placed on any level surface that can safely support its weight plus the weight of the attached cables. When placing the KVM switch on a desktop, remove the backing material from the rubber feet and attach them to the switch's bottom panel at the corners.

**Note:** To ensure adequate ventilation, allow at least 2 inches (5 cm) on each side and 5 inches (13 cm) space at the back for power cord and cable clearance.


### Grounding

To prevent damage to your installation, it is important that all devices are properly grounded. Use a grounding wire to connect the grounding terminal on the back of the KVM to a suitably grounded object.

### Installation

#### Note:

- Before proceeding with installation, make sure all devices being connected to the KVM switch are turned off.
- If you find that the keyboard and/or mouse has locked up, or the KVM switch is acting erratically, pressing the Reset button on the front of the unit may resolve the issue. Pressing this button performs the same function as powering the KVM switch off and on.

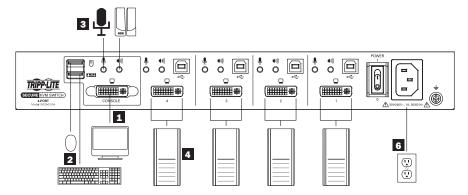

- 1 Connect your monitor to the DVI console port on the back of the unit.
- Connect your USB keyboard and mouse to the USB console ports on the back of the unit.
- 3 Connect your speakers and microphone to the 3.5 mm console ports on the back or front of the unit.

Note: The 3.5 mm console ports on the front of the unit take priority over those on the back.

- Connect a computer to an available set of DVI, USB and Audio ports on the back of the unit using a P759-Series cable kit.
- 5 Repeat step 4 for each additional computer you are connecting.
- Connect the included power cord to the KVM, and plug it into a Tripp Lite Surge Protector, Power Distribution Unit (PDU), or Uninterruptible Power Supply (UPS). Power the unit on.
- Power the connected computers on. The green LED will illuminate to indicate that a powered-on computer is connected to the corresponding port. The orange LED will illuminate to indicate that the corresponding port has the focus of the KVM switch.

**Note:** By default, the lowest port is the one that is selected when the KVM is powered on.

To switch ports, press the button on the front of the KVM that corresponds to the port you wish to access.

# Installation continued

#### **Specifications**

	B002-DUA2	B002-DUA4	
Number of Computer Ports	2	4	
Max Number of Connected Computers	2	4	
Console Ports	DVI-I Female, (x2) USB-A Female, (x2) 3.5 mm Female		
Computer Ports	(x2) USB-B Female, (x2) DVI-I Female, (x4) 3.5 mm Female	(x4) USB-B Female, (x4) DVI-I Female, (x8) 3.5 mm Female	
LEDs	(x2) Green / Online, (x2) Orange / Selected	(x4) Green / Online, (x4) Orange / Selected	
Maximum Supported Video Resolution	Digital – 2560 x 1600, Analog – 2048 x 1536		
I/P Rating	100-240V, 50/60 Hz, 0.5A		
Power Consumption	5.1W (120V), 5.1W (230V)	6.1W (120V), 5.7W (230V)	
Operating Temperature	32 to 104°F / 0 to 40°C		
Storage Temperature	-4 to 140°F / -20 to 60°C		
Humidity	0 to 80% RH, Non-Condensing		
Dimensions (H x W x D)	1.75 x 13.25 x 6 in. / 44 x 367 x 152 mm		
Weight	3.65 lb. / 1.65 kg	3.7 lb. / 1.68 kg	

# **Warranty & Product Registration**

#### 3-YEAR LIMITED WARRANTY

Seller warrants this product, if used in accordance with all applicable instructions, to be free from original defects in material and workmanship for a period of three (3) years from the date of initial purchase. If the product should prove defective in material or workmanship within that period, Seller will repair or replace the product, in its sole discretion. Service under this Warranty can only be obtained by your delivering or shipping the product (with all shipping or delivery charges prepaid) to: Tripp Lite; 1111 W. 35th Street; Chicago IL 60609; USA. Seller will pay return shipping charges. Visit www.tripplite.com/support before sending any equipment back for repair.

THIS WARRANTY DOES NOT APPLY TO NORMAL WEAR OR TO DAMAGE RESULTING FROM ACCIDENT, MISUSE, ABUSE OR NEGLECT. SELLER MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY EXPRESSLY SET FORTH HEREIN. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL IMPLIED WARRANTIES, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE; AND THIS WARRANTY EXPRESSLY EXCLUDES ALL INCIDENTAL AND CONSEQUENTIAL DAMAGES. (Some states do not allow limitations on how long an implied warranty lasts, and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from jurisdiction to jurisdiction).

Tripp Lite; 1111 W. 35th Street; Chicago IL 60609; USA

WARNING: The individual user should take care to determine prior to use whether this device is suitable, adequate or safe for the use intended. Since individual applications are subject to great variation, the manufacturer makes no representation or warranty as to the suitability or fitness of these devices for any specific application.

# Warranty & Product Registration continued

#### PRODUCT REGISTRATION

Visit www.tripplite.com/warranty today to register your new Tripp Lite product. You'll be automatically entered into a drawing for a chance to win a FREE Tripp Lite product!\*

\* No purchase necessary. Void where prohibited. Some restrictions apply. See website for details.

#### **Regulatory Compliance Identification Numbers**

For the purpose of regulatory compliance certifications and identification, your Tripp Lite product has been assigned a unique series number. The series number can be found on the product nameplate label, along with all required approval markings and information. When requesting compliance information for this product, always refer to the series number. The series number should not be confused with the marking name or model number of the product.

#### WEEE Compliance Information for Tripp Lite Customers and Recyclers (European Union)



Under the Waste Electrical and Electronic Equipment (WEEE) Directive and implementing regulations, when customers buy new electrical and electronic equipment from Tripp Lite they are entitled to:

- Send old equipment for recycling on a one-for-one, like-for-like basis (this varies depending on the country)
- · Send the new equipment back for recycling when this ultimately becomes waste

#### FCC Notice, Class B

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications to this equipment not expressly approved by Tripp Lite could void the user's authority to operate this equipment.

#### Warning

Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended.

Tripp Lite has a policy of continuous improvement. Product specifications are subject to change without notice.





1111 W. 35th Street, Chicago, IL 60609 USA • www.tripplite.com/support

17-10-008-933135-EN.indd 8 10/13/2017 2:35:54 PM